

 


INSTRUCTION MANUAL

---

# 15.4"LCD/DVD COMBO TELEVISION

## LCDVD151A

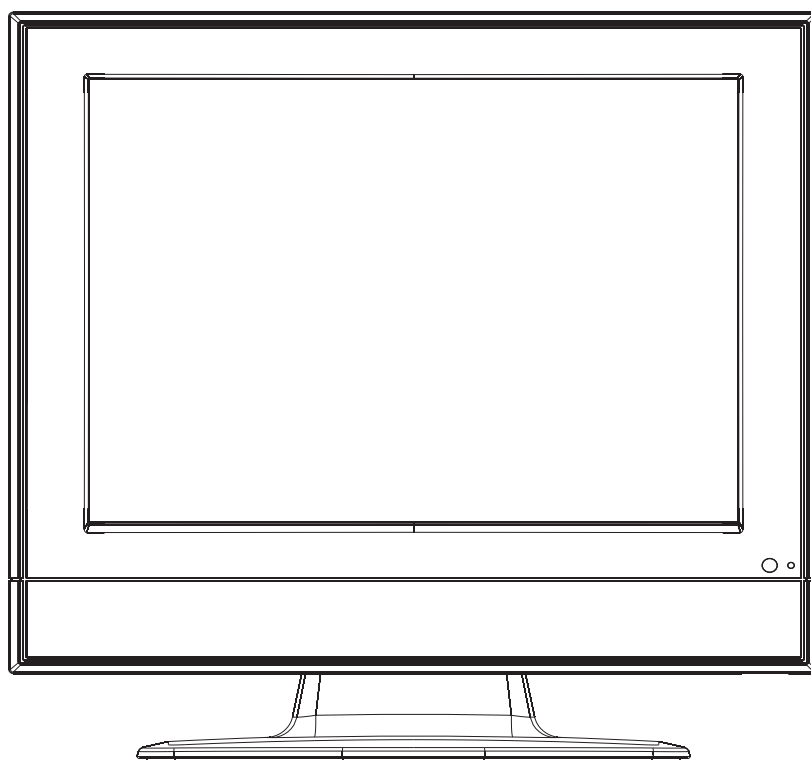

\*.Attention.

This unit can receive American ATSC HD(Digital TV Signal)Broadcasting Channels in U.S.A.only.

---

**Read all of the instructions before using this TV and keep the instruction manual in a safe place for future reference.**

# Contents

1	Caution
2	Safety Information
3	Unit and Accessory
3	Product Feature
4	Getting Started
4	Front View
5	Rear View
6	Remote Control Key Functions
8	Menu Operation
8	Basic operation
10	Picture menu options
11	Audio menu options
11	Setup menu options
13	Feature menu options
14	Parental menu options
16	Feature menu options in VGA
17	Feature menu options in Component
18	Playing the DVD Player
18	Basic Control Function
19	OSD Menu In DVD Mode
21	Disc Care
22	Simple Troubleshooting
23	Technical Specifications

## Caution



The lightening flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of un-insulated "dangerous voltage" within the products enclosure that may be of sufficient magnitude to constitute a risk of electric shock to the persons.



The exclamation point within an equilateral triangle is intend to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



### **Correct disposal of this Product**

Waste Electrical & Electronic Equipment (WEEE)

Your product is designed and manufactured with high quality materials and components which can be recycled and reused.

This symbol means that electrical and electronic equipment, at their end-of-life, should be disposed of separately from your household waste.

Please dispose of this equipment at your local community waste collection/recycling centre.

In the European Union there are separate collection systems for used electrical and electronic products. Please help us to conserve the environment we live in!

## Safety Information

To ensure reliable and safe operation of this equipment, please read carefully all the instructions in this user guide, especially the safety information below.

 
### **Electrical safety**

- The TV set should only be connected to a mains supply which matches that stated on the label.
- To prevent overload, don't share the same mains supply socket with too many other items of equipment.
- Do not place any connecting wires where: they may be stepped on or tripped over.
- Do not place heavy items on them, which may damage the leads.
- Hold the main plug, not the wires, when removing from a socket.
- During a thunderstorm or while leaving the TV for long periods, set the switch off.
- Do not allow water or moisture to enter the TV or mains adaptor. Do NOT use in wet or moist areas, such as Bathrooms, steamy kitchens or near swimming pools.
- Pull the plug out immediately, and seek professional help if: the mains plug or cable is damaged, liquid is spilt onto the set, or if it is accidentally exposed to water or moisture, anything accidentally penetrates the ventilation slots, the set doesn't work normally.
- Do not remove the safety covers. There are no user serviceable parts inside. You may invalidate the warranty. This apparatus must only be serviced by qualified personnel.
- To avoid battery leakage, remove exhausted batteries from the remote control, or when not using for a long period.
- Do not break open or throw exhausted batteries on a fire.


### **Physical safety**

- Do not block ventilation slots in the back cover. You may place the TV in a cabinet, but ensure at least 5cm (2") clearance all around.
- Do not tap or shake the TV screen, or you may damage the internal circuits. Take good care of the remote control.
- To clean the TV use a soft dry cloth. Do not use solvents or petrol based fluids.
- Do not install near any heat sources such as radiators, heat registers stoves or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong, the wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs.
- Use only attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, has been exposed to rain or moisture, does not operate normally or has been dropped.
- Please always connect an apparatus with Class I structure to a main socket with protective earthing connection.
- Please make sure both main plug and appliance coupler work properly.


## Unit and Accessory

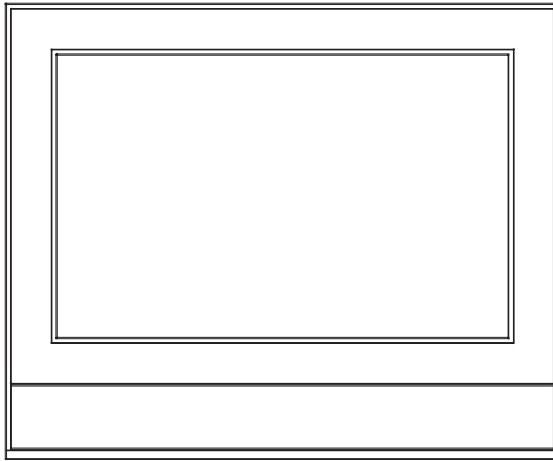


TV set

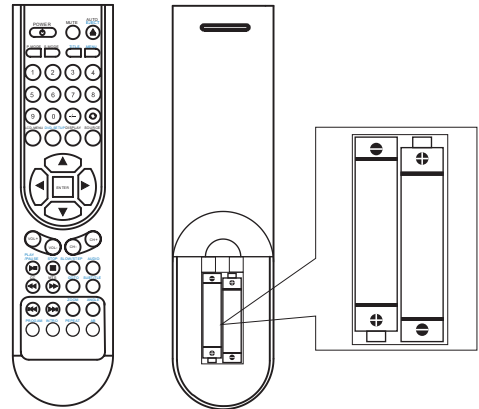 


Remote Control

 

User's Manual

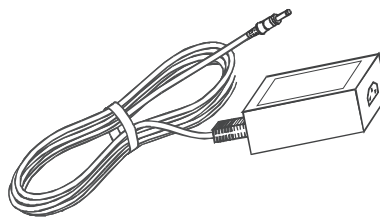 

Mains adaptor

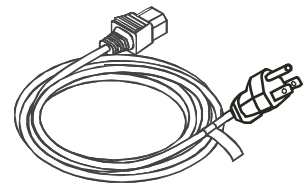 


Mains cable

# Getting Started
 
## Front view

Insert a 12cm disc with the label side facing towards you

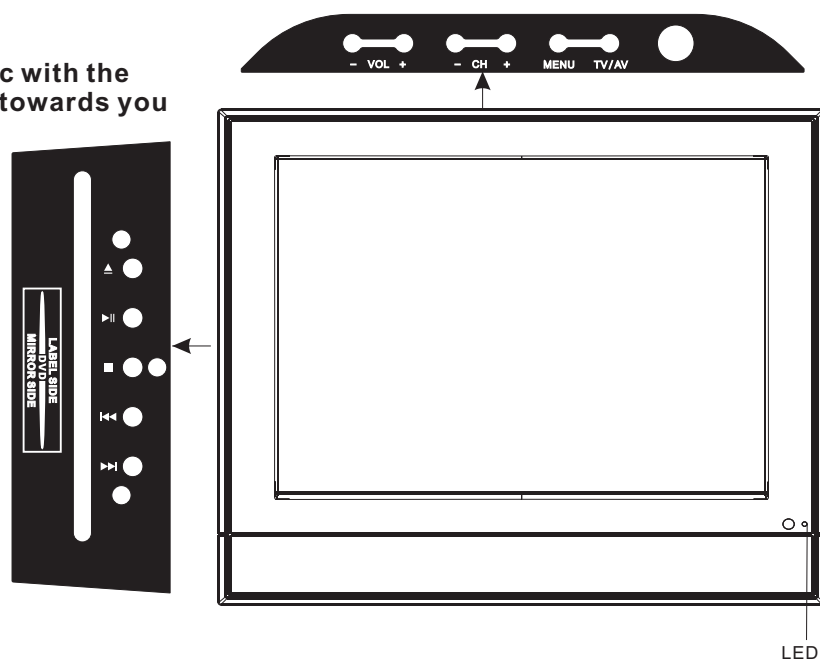

- (IR) Infrared Receiver: Receives IR signals from the remote control.  
(Power on/Standby) LED Indicator: Press **POWER** to turn on and off,


Indicator on (Red)  
Indicator on (Green)

Standby mode  
Power on mode

The effective receiving scope for the signal is 5-8 meters from the front of the remote control window, and 30° to the left or right side and 20° above or below the control window.

- The functions of the buttons are described as follows:  
**TV/AV** : Press to display the input source menu.  
**MENU**: Press to display the OSD menu, Press again to exit the menu.  
**CH +/-**: Press to scan through channels.  
**VOL +/-**: Press to adjust the volume.  
**POWER**: Turn on/standby the TV set.

## Rear view

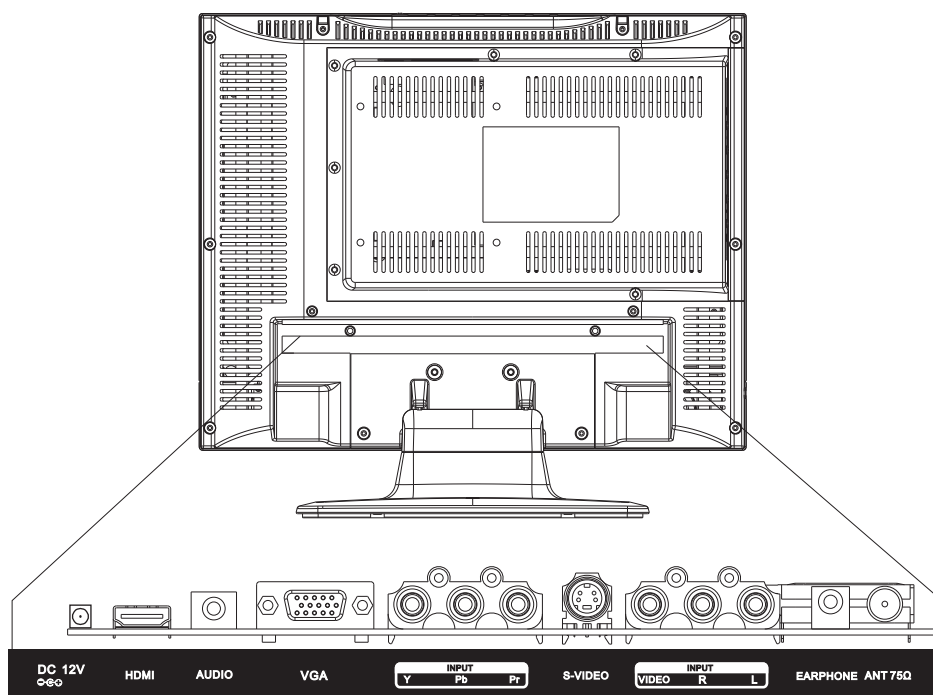 


Name	Function Description
POWER (DCIN)	Connect to Mains Adapter
HDMI IN	Connect to HDMI of DVD or other equipment
PC Audio in	PC audio input
VGA IN	VGA signal from computer output
YPbPr	Connect to the composite terminal of your DVD/VCR
S-Video IN	S-Video signal input
Video IN	Video signal input
(AUDIO)L/R	Audio signal input for AV
Earphone	Connect it to your head phone or other audio equipment
ANT 75Ω	Connect to antenna or cable source

## Wall Mounting

 The TV is provided with mounting holes for a VESA approved wall mounting bracket (NOT SUPPLIED). Remove the Two Posi screws holding the base to the base bracket and lift the base away (do not remove the base mounting bracket). Mount the VESA bracket using 4 x M4x8 Iso metric threaded screws (not supplied). Do not use screws longer than 8mm, damage will occur to the internal parts. Fit the wall bracket securely following the manufacturers instructions.

# Remote Control Key Functions

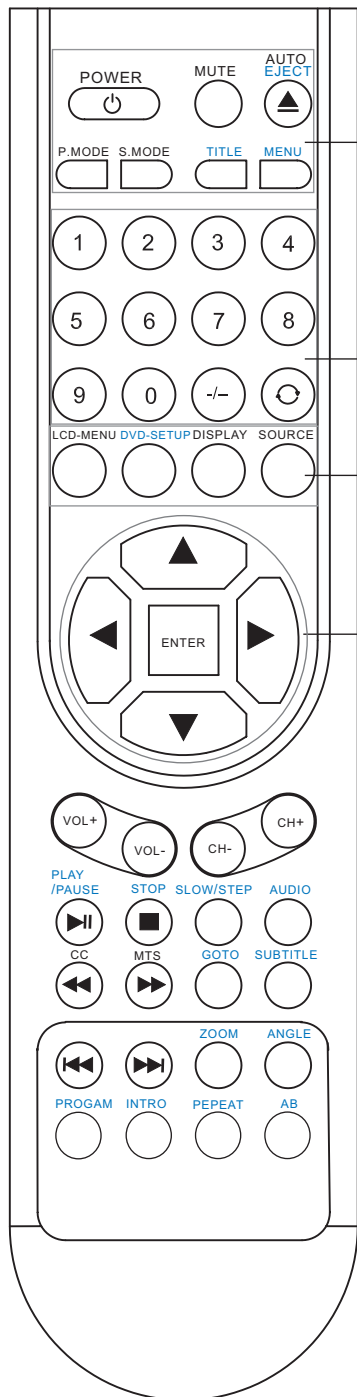

## POWER

Switch on LCD TV at standby mode or vice versa.

## MUTE

Press to mute the sound. Press again or press VOL+ to resume.

## ▲ AUTO EJECT

DVD eject

## P.MODE

Press repeatedly to cycle through the available video picture modes.

## S.MODE

Press to cycle through the different sound settings.

## TITLE

Press to select the DVD title.

## MENU

DVD play list/ DISC menu.

## NUMBER BUTTONS

Press 0-9 to select a TV channel directly when you are watching TV. The channel change after 2 seconds.

-/-

Press this button to enter a program number for multiple program channel such as 2-1, etc.

↺

Return to the previous channel viewed.

## LCD-MENU

TV system setup.

## DVD-SETUP

DVD system setup.

## DISPLAY

Press to display the source and channel's information.

## SOURCE

 
Press to cycle through the input source in following:

TV → Composite → S-Video → Component → VGA → HDMI → DVD

## THUMBSTICK (▲ ▼ ◀ ▶ / ENTER)

Allows you to navigate the on-screen menus and adjust the system settings to your preference.

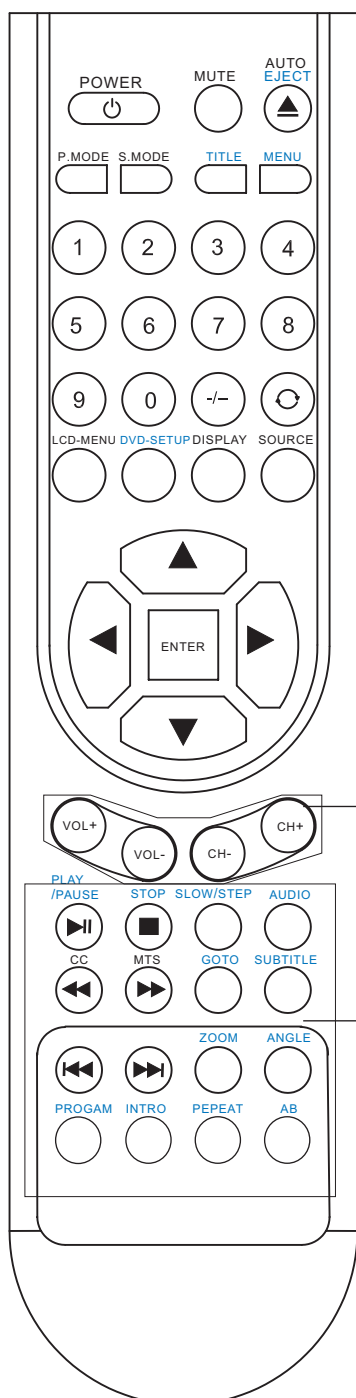

**CH+/-**

Press to scan through channels. To scan quickly channels, press and hold down either +/-button.

**VOL+/-**

Press to increase/decrease the sound level.

**Play/Pause**

Play/Pause DVD program.

**STOP**

Stop DVD program.

**SLOW/STEP**

Play DVD programs at slow speed.

**AUDIO**

Select DVD disc language.

**◀/CC**

DVD fast reverse. / Press to display the closed caption.

**▶/MTS**

DVD fast forward. / Press to select the audio channels.

**GOTO**

Play your favorite title/chapter/track.

**SUBTITLE**

Select DVD disc subtitle.

**◀◀**

DVD previous chapter.

**▶▶**

DVD next chapter.

**ZOOM**

Select display mode:FULL/4:3 .

In DVD source this buttons to adjust DVD picture size.

**ANGLE**

Select DVD picture angle.

**PROGRAM**

Press this button to change the playback order.

It varies according to the different discs.

**INTRO**

If you play CD, it will scan program with 3S.

**REPEAT**

Repeat playing the title or chapter.

**A-B**

Select and play the preferable paragraph of DVD program by pressing this key twice at the beginning and end of it.

# Menu Operation

 
## Basic operation



The OSD (On Screen Display) function enables you to adjust the screen status conveniently since it provides graphical presentation.

## Initial Setup Menu

**NOTE:** If this is the first time you run the LCD TV, the Initial Setup Menu will appear in the picture, and the items of this menu also exist in other menus, so you are able to change the values after you set them up.

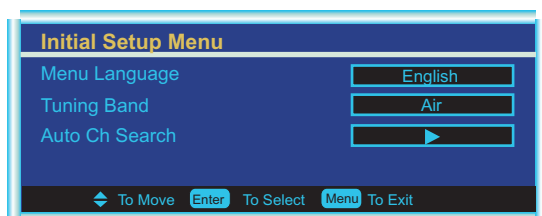

### Menu Language

Press ▼ / ▲ button to select this item, then press **ENTER/▶** button to select the OSD language.

### Tuning Band

Select **Tuning Band** mode. (Available tuning band mode: **Air**, **Cable STD**, **Cable HRC**, **Cable IRC**, **Cable Auto**.)

If sets Air, the range of channel is 2-69, and if sets Cable, the range of channel is 1-135.

### Auto Ch Search

Press ▼ / ▲ button to select this item, then press **ENTER/▶** button to enter the Auto Channel Search Program.

## Choosing a TV channel

### 1. Press CH+/CH- button on the front panel or on the remote control.

- Press **CH+** button for the next channel
- Press **CH-** button for the previous channel.

### 2. Press 0-9 buttons and -/-- button.

You can select the channel by pressing 0 to 9 buttons directly for the channel you want.

Press the **-/--** button to enter a program number for digital program channel.

### 3. Example:

- To select 1-digit channel (e.g. Channel 5): Press the 5 and **ENTER** button.
- To select 2-digit channel (e.g. Channel 20): Press the 2 and 0 buttons, then press **ENTER** button.
- To select 3-digit channel (e.g. Channel 103): Press the 1 and 0 and 3 buttons, then press **ENTER** button.
- To select a program number for multiple program channel (e.g. Channel 2-1): Press the 2 button, then press **-/--** and 1 button, then press **ENTER** button.

**Note:** After select the digit button, the digit will be memorized.

## Volume adjustment

1. Press **VOL+/-** button to adjust the volume.



 
2. Press **MUTE** ( ) button to mute the TV, Press **MUTE** ( ) button again or **VOL+/-** button to cancel the mute function.



The OSD ( On Screen Display ) in this document may be different from your TV's, because this is just an reference for your product.

## OSD Adjustment

- Press **MENU** button to display the main menu.
- Press **◀/▶/▲/▼** buttons to select the available menus.

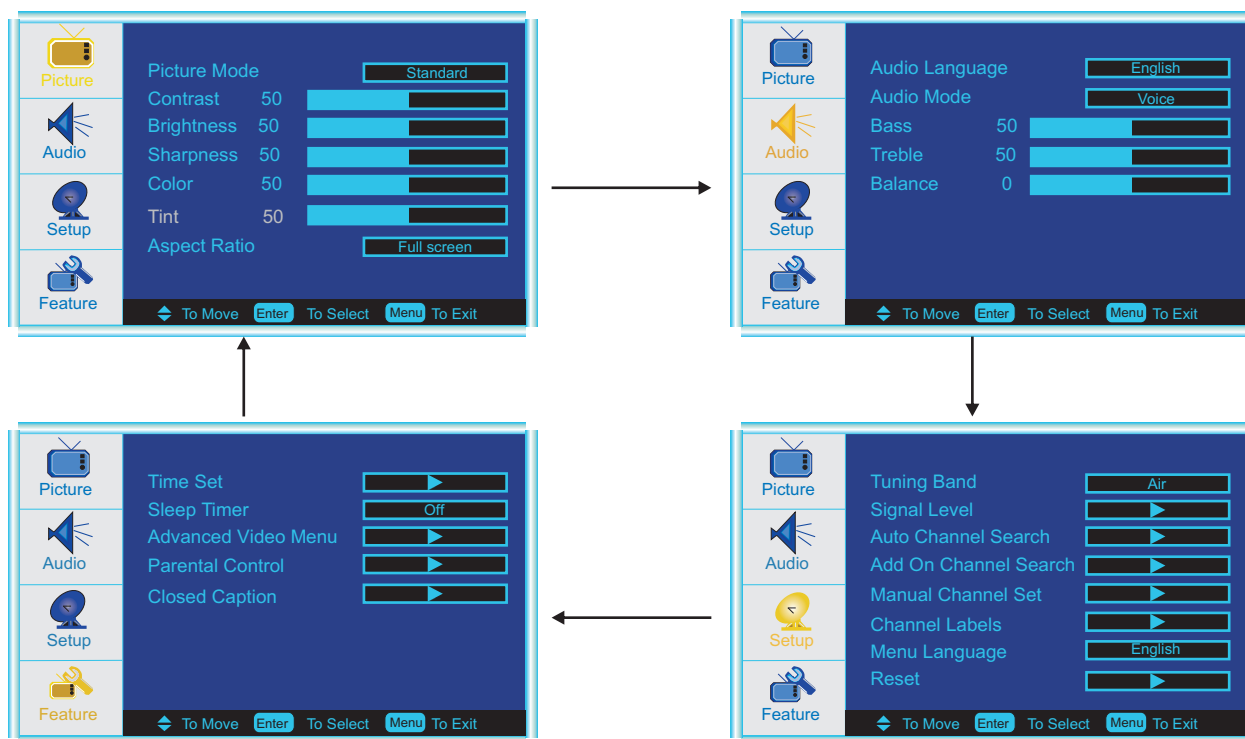

## Selecting input source

You can select the input source by pressing **input** button on the remote control or on the front panel.



## Picture menu options



Press **MENU** button on the front panel or the remote control to display the main menu.

Press **▲/▼** button to select the **PICTURE** menu, then press **►** button for the submenu.

- Press **▲/▼** button to select the item you want to adjust.
- Press **ENTER/►** button repeatedly to adjust the value.

When you are satisfied with your choice, press **◀** button to go to the previous menu, or press **MENU/EXIT** button to exit.

### Picture Mode

Select **Picture Mode** in **PICTURE** menu. (Available picture mode: **Standard, Vivid, Bright, User.**)

You should set the Picture Mode to "User" first if you want to change the value of Contrast/Brightness/Sharpness/Color/Tint,

**TIPS:** you can select the picture mode directly by pressing **PMODE** button repeatedly.

### Contrast

Press **▼ / ▲** button to select this item, then press **ENTER/►** button to adjust the contrast of the picture.



### Brightness

Press **▼ / ▲** button to select this item, then press **ENTER/►** button to adjust the brightness of the picture.

### Sharpness

Press **▼ / ▲** button to select this item, then press **ENTER/►** button to adjust the sharpness of the picture.

### Color

Press **▼ / ▲** button to select this item, then press **ENTER/►** button to adjust the color saturation of the picture.

### Tint

 
Press **▼ / ▲** button to select this item, then press **ENTER/►** button to adjust the tint of the picture.

**NOTE:** The Tint item is not available but in NTSC color system.

### Aspect Ratio

Press **▼ / ▲** button to select this item, then press **ENTER/►** button to adjust the aspect the aspect ratio of the picture. (Available aspect ratio: **FullScreen, Normal, Zoom, Wide, Cinema, Waterglass.**)

## AUDIO menu options

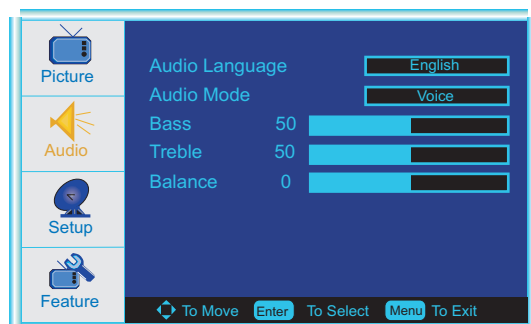

- Press **MENU** button on the front panel or the remote control to display the main menu.
- Press **▲/▼** button to select the **AUDIO** menu, then press **►** button for the submenu.
- Press **▲/▼** button to select the item you want to adjust.
- Press **ENTER/►** button repeatedly to adjust the value.
- When you are satisfied with your choice, press **◀** button to go to the previous menu, or press **MENU/EXIT** button to exit.

### Audio Mode

Select **Audio Mode** in **AUDIO** menu. (Available audio mode: **User/Voice/Concert/Jazz** .)

You should set the Picture Mode to "User" first if you want to change the value of Bass/Treble.

**TIPS:** you can select the picture mode directly by pressing **SMODE** button repeatedly.

### Audio Language

Press **▼ / ▲** button to select this item, then press **ENTER/►** button to adjust the aspect the audio language.

**NOTE:** This item will be unavailable if the program system does not provide several audio languages.

### Bass

Press **▼ / ▲** button to select this item, then press **ENTER/►** button to adjust the bass value.

 
### Treble

Press **▼ / ▲** button to select this item, then press **ENTER/►** button to adjust the Treble value.

### Balance

Press **▼ / ▲** button to select this item, then press **ENTER/►** button to adjust the sound balance.

## Setup menu options

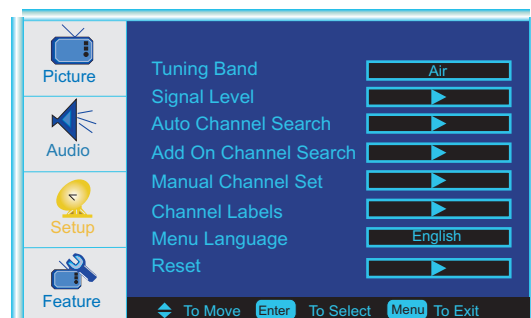

- Press **MENU** button on the front panel or the remote control to display the main menu.
- Press **▲/▼** button to select the **SETUP** menu, then press **►** button for the submenu.
- Press **▲/▼** button to select the item you want to adjust.
- Press **ENTER/►** button repeatedly to adjust the value.
- When you are satisfied with your choice, press **◀** button to go to the previous menu, or press **MENU/EXIT** button to exit.


### Tuning Band

 Select **Tuning Band** mode. (Available tuning band mode: **Air, Cable STD, Cable HRC, Cable IRC, Cable Auto.**)

If sets Air, the range of channel is 2-69, and if sets Cable, the range of channel is 1-135.


### Signal Level

In DTV mode, you can refer the strength of the current channel ,and you can tune manually and adjust the angle, orientation of the antenna etc.




### Auto Channel Search

 Press ▼ / ▲ button to select this item, then press ENTER/► button to enter the **Auto Channel Search Program**.

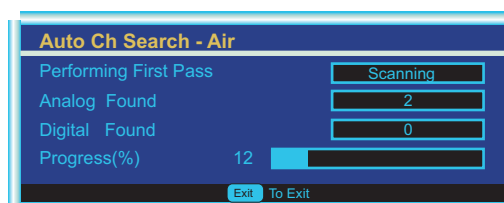

### Add On Channel Search

 Press ▼ / ▲ button to select this item, then press ENTER/► button to enter the **Add On Channel Search Program**. This function will add the channels not found before, and will not delete the channels unavailable at present.

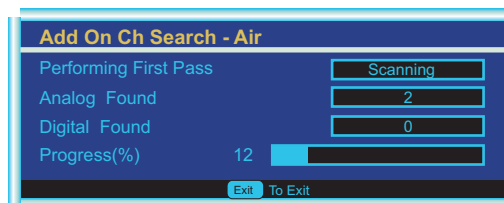


### Manual Channel Set

Press ENTER button to display a channel list that you can select channel as below:



### Channel labels

 Allows you to name the channel selected. press ◀/▶ button to select the position of letter, press ▲/▼ button to set the name.

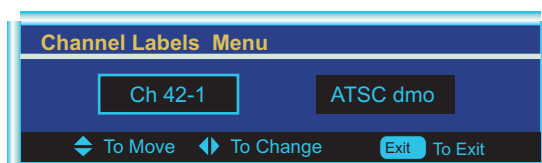


### Menu Language

Press ▼ / ▲ button to select this item, then press ENTER/► button to select the OSD language.

**Reset**

 Press **ENTER/▶** button to reset all items to the default value.

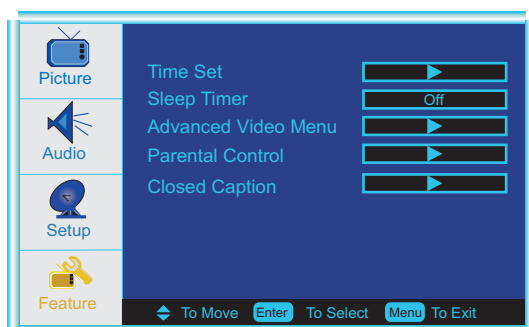**Feature menu options**

Press **MENU** button on the front panel or the remote control to display the main menu.

Press **▲/▼** button to select the **FEATURE** menu, then press **▶** button for the submenu.


Press **▲/▼** button to select the item you want to adjust.

Press **ENTER/▶** button repeatedly to adjust the value.

When you are satisfied with your choice, press **◀** button to go to the previous menu, or press **MENU/EXIT** button to exit.

**Time Set**

 Press **▼ / ▲** button to select this item, then press **ENTER/▶** button for **Time Set Menu**.

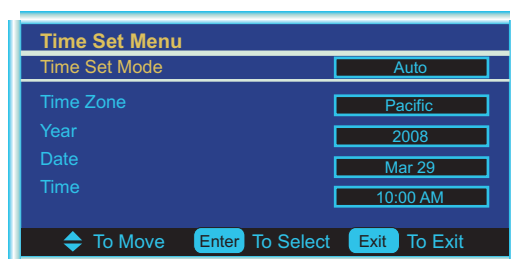**Time Set Mode**

Press **ENTER/▶** button to select the time set mode from **AUTO** and **MANUAL**.

(Available aspect ratio: **FullScreen**, **Normal**, **Zoom**, **Wide**, **Cinema**, **Waterglass**.)

You should set the Time Set Mode to "Manual" first if you want to change the value of Time Zone/Year/Date/Time.

**Time Zone**

Press **▼ / ▲** button to select this item, then press **ENTER/▶** button to select the time zone for your TV.

 
**Sleep Timer**

Select the sleep time to put automatically the TV in standby mode. Timer can be selected as 5min/10min/15min/30min/45min/60min/90 min/120 min/180 min/240 min/Off.

Also you can select the sleep time by pressing SLEEP button repeatedly..

**Advanced Video Menu**

Press **▼ / ▲** button to select this item, then press **ENTER/▶** button for **Advanced Video Menu**.

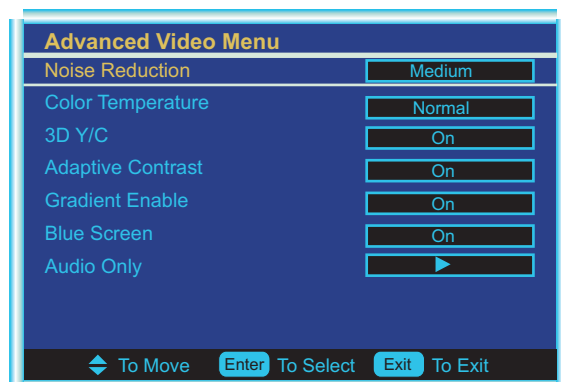

**Noise Reduction**

Press **ENTER/◀/▶** button to select the level of noise reduction from Off/Low/Medium/High.

**Color Temperature**

Press **ENTER/◀/▶** button to select the color temperature from Cool/Normal/Warm.

**3D/YC**

Press **ENTER/◀/▶** button to set the 3D/YC on or off.

**Adaptive Contrast**

Press **ENTER/◀/▶** button to set the Adaptive Contrast on or off.

**Gradient Enable**

Press **ENTER/◀/▶** button to set the Gradient Enable on or off.

**Blue Screen**

 
Press **ENTER/◀/▶** button to set the Blue Screen on or off.

**Audio only:**

Press **ENTER**/button to turn off the video picture ,listen the audio only.

**Parental Control**

You need to enter the password for the submenu. And the original password is 0000.

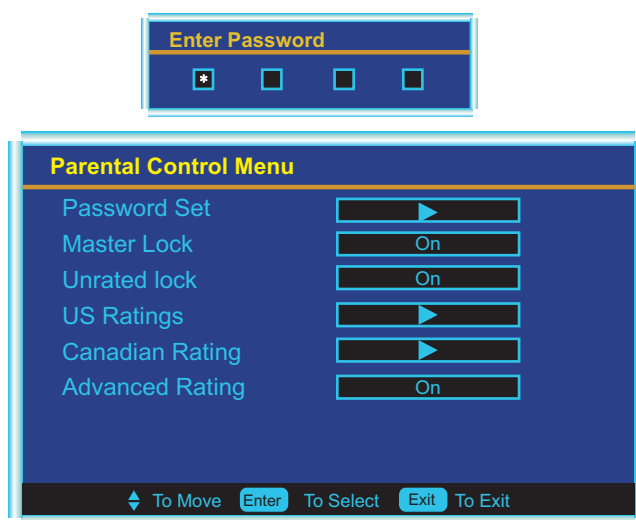**Password Set**

You need to enter the correct old password before setting a new password, and after set the new password, you need to enter it again to confirm it.

**Master Lock**

Press **ENTER/▶** button to set the Master Lock on/off, if you set this function on, all the parental control lock will be unavailable and it can play all kinds of programs.

**Unrated Lock**

Press **ENTER/▶** button to set the Unrated Lock on/off, if you set this function on, all the programs will be locked even they are unrated program.

 
 


### US Ratings

Press ▼ / ▲ button to select this item, then press **ENTER/►** button for **US Ratings Menu**.

### Canadian Rating Menu

Press ▼ / ▲ button to select this item, then press **ENTER/►** button for **Canadian Rating Menu**.

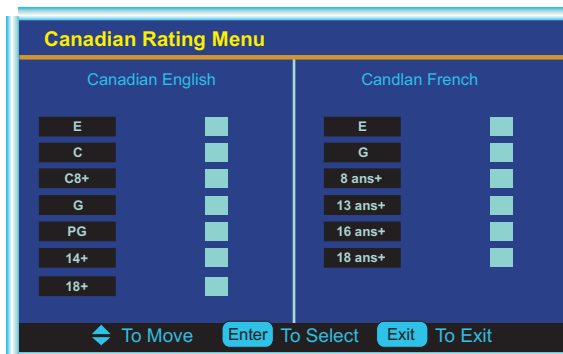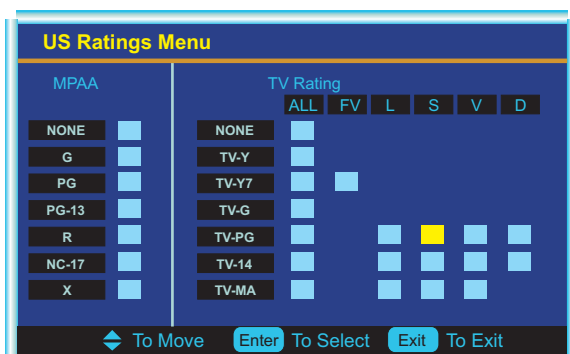


### Advanced Rating

Press ▼ / ▲ button to select this item, then press **ENTER/►** button to set advanced rating on/off.

### Closed Caption

 Press ▼ / ▲ button to select this item, then press **ENTER/►** button for **Closed Caption Menu**.

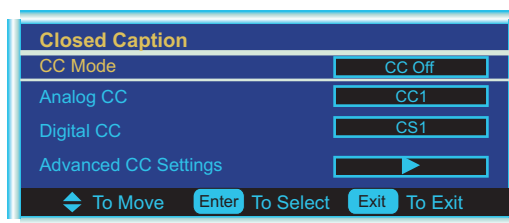

### CC Mode

Press **ENTER/►** button to select CC Mode from CC Off / CC On / CC Mute.

### Analog CC

 
Press **ENTER/►** button to select Analog CC Mode.

### Digital CC

Press **ENTER/►** button to select Digital CC Mode.

### Advanced CC Settings

Press **ENTER/►** button for **Advanced CC Settings Menu**.

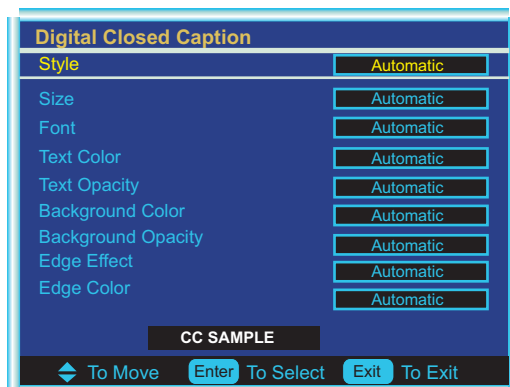


- **Style:** Press **ENTER/►** button to select CC Style between **Automatic** and **Custom**, you need to set it to **Custom** first if you want to change the value of items below.
- **Size:** Normal/Large and Small.
- **Font:** From Font1 to Font7.
- **Text Color:** Red/Green/Blue/Yellow/Magenta/Cyan/Black/White.

- **Text Opacity:** Solid/Flashing/Transparent/Translucent.
- **Background Color:** Black/White/Red/Green/Blue/Yellow/Magenta/Cyan.
- **Background Opacity:** Solid/Flashing/Transparent/Translucent.
- **Edge Effect:** None/Raised/Depressed/Uniform/Left Shadow/Right Shadow.
- **Edge Color:** Black/White/Red/Green/Blue/Yellow/Magenta/Cyan.


## Feature menu options in VGA

 Press **Input** button to select the input source to VGA.

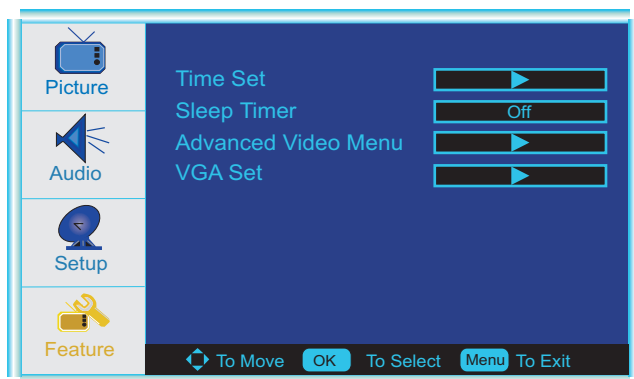

### VGA Set

 Press **▼ / ▲** button to select **VGA Set**, then press **ENTER/►** button for **VGA Setting Menu**.

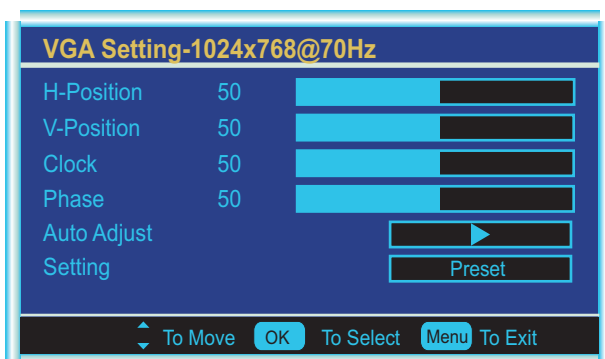

### H-Position

Press **ENTER/►** button to adjust the horizontal position of the picture.

### V-Position

Press **ENTER/►** button to adjust the vertical position of the picture

### Clock

Press **ENTER/►** button to adjust the clock of the picture.

### Phase

Press **ENTER/►** button to adjust the phase of the picture.

### Auto Adjust

 
Press **ENTER/►** button to auto adjust the VGA setting.

### Setting

Press **ENTER/►** button to reset the VGA setting to factory default.


## Feature menu options in Component

Press **Input** button to select the input source to component.

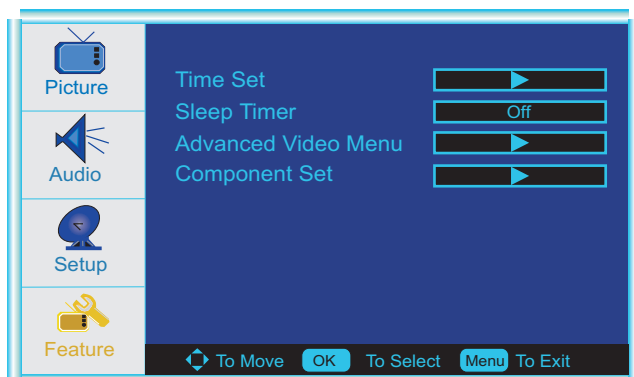

### Component Set

 Press **▼ / ▲** button to select **Component Set**, then press **ENTER/►** button for **Component Setting Menu**.

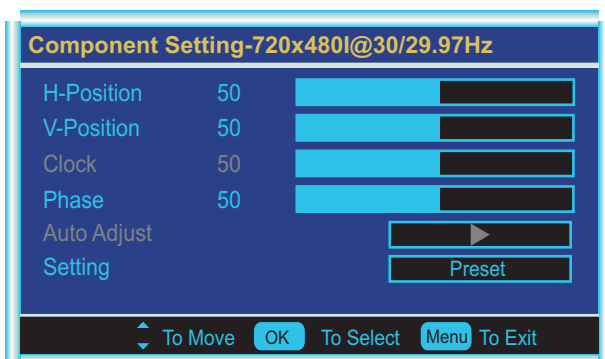

### H-Position

Press **ENTER/►** button to adjust the horizontal position of the picture.

### V-Position

Press **ENTER/►** button to adjust the vertical position of the picture

### Clock

This function is unavailable in component mode.

### Phase

Press **ENTER/►** button to adjust the phase of the picture.

### Auto Adjust

This function is unavailable in component mode.

### Setting

Press **ENTER/►** button to reset the **Component Setting** to factory default.

## DVD Operation

Title: DVD Video discs are usually divided into several numbered sections called titles.

Chapter: A title comprises smaller numbered sections called chapters.

### Playing the DVD Player

1. Press the 'SOURCE' button to select 'DVD' mode, if no disc is inserted yet, the display shows 'No Disc'.
2. Insert a DVD with the label printed side facing towards you.



3. The TV will first display 'Loading', then change to 'DVD-video'. Most DVDs will show some preliminary information then stop at a main menu screen.
4. Press PLAY/PAUSE to play it directly. Or press the DVD-MENU button to access the disc menu during playback.
5. Use the direction button on the remote control to select the desired option. Press ENTER to select the option or press the ► button. Playback will now commence.
6. After playback, press the EJECT button on remote control or EJECT button on TV/DVD to remove the disc.

Note: No function'' will sometimes appear on the screen after a button is pressed. This indicates that the function is not supported at the current time.

### Getting Started

Carefully remove the TV / DVD and all other items from the box. You may wish to store the packaging for future use.

Please read these instructions thoroughly before use.

### Compatible Discs

The DVD player supports the following disc formats:



12cm DVD Video Discs.



12cm Compact Disc Audio Discs.



12cm Still High Resolution

**WARNING! DO NOT INSERT OR PLAY 8CM DISCS, THEY WILL GET STUCK.**

## Basic Control Function

### Play/Pause

1. Press the ► button to play/ pause the DVD. The screen will freeze its current picture when paused.
2. For resume play, press the ► button.

### Stop

After pressing the button to stop playback. 'Press Play Key To Continue' will be displayed on the top left on the screen, also '■' on the top right. Press the ► button to resume playback.

Press the "button twice to stop playback completely. " Will be displayed on the screen.

### Fast Playback

You can search either forwards or backwards for a particular part of the DVD.

To search forwards, press the buttons ►►.

The playback speed is doubled and 'FORWARD X2' is displayed.

Each subsequent press of the ►► button toggles among different speeds (►► 2X - ►► 4X - ►► 8X - ►► 16X - ►► 32X -PLAY), up to 32 times the normal speed. Pressing the buttons ►► after " ►► 32X" reverts to normal playback speed.

To resume normal playback at any time, press the ► buttons.

To search backwards, press the ◄◄ button. This operates in the same way as the ►► button but in the reverse direction.

### Subtitles

Most DVDs are recorded with subtitles and some have the subtitles available in different languages.

To select subtitles, press the SUB-T button.

If different languages are available, repeatedly press the SUB-T button until the language you require is displayed.

### Chapter Selection

During playback you can select different chapters of the DVD. Press DVD-MENU to the root menu. Press direction buttons or Next, PREVIOUS buttons to choose different chapters. Note: It is just for reference.

Press ENTER button to confirm.

### Audio Configuration

Some DVDs are recorded with multiple audio channels. These can be used for different languages or for commentaries.

Repeatedly press the AUDIO button to select the desired audio channel.

### Repeat Chapter/Title

To repeat playback of a chapter, press the REPEAT button while the chapter is playing. 'Chapter' will be displayed.

To repeat playback of the title, press the REPEAT button twice. 'Title' will be displayed.

To repeat playback of the title, press the REPEAT button three times. 'All' will be displayed.

Press the REPEAT button four times to cancel repeat playback.

### Program Play

1. Compatible with DVD, CD, HD-CD, WMA, Digital Audio disc /JPEG discs.

2. The Program Playback option allows you to enter the order in which you want chapters or tracks to play, maximum to 16.

3. Program Menu: If PBC is on, this operation will turn PBC off while the chapters / tracks play in programmed order.

4. According to the highlight, use the Numeric buttons to enter the chapters / tracks in the order you want them to play. Then press Play or use Arrow buttons to highlight the "PLAY" item and press Enter. The chapters /tracks will play in the programmed order. You can program maximum 16 titles / chapters / tracks.18

5. According to the Direction Indicator on the menu, you can press Arrow buttons to highlight where you want to enter.

6. During Program Playback, if program button is repressed, the program order and the contents will be displayed on the screen, and the Program Playback will be stopped; also you can press Stop and Play to resume normal playback.

7. Notes:

To clear the program order, use Arrow buttons to highlight the "CLEAR" item, then press Enter.

To modify the program order, use Arrow buttons to highlight the item you are changing and enter the new chapter / track you want to program directly.

8. The program indicator in the screen and the playing chapter / track illuminate.

**Note: Some discs do not support the repeat function, different disc shows different information.**

## OSD Menu In DVD Mode

### General Setup Page

Press SOURCE button on the remote control ,then select DVD item in Source list

a. Press DVD-SETUP button on remote control during playing DVD, it will show following menu:

(When the DVD menu displayed ,the DVD system will auto pause. Press SETUP again, it will go on)'



b. Press "▼/▲" to choose the items, then enter the desired item with ENTER button. It has been set already when the desired item becomes red.

*Note: Press Left button to get back the previous menu.*

c. Press SETUP to exit the menu.

d. The items of the menu as below:

 


OSD Lang.: Set the language of OSD menu. Default setting is English.

Last Memory: set it on to memorize the last stop point. During playing the DVD, you change to other mode. When you come back to DVD mode, it can play automatically from the last stop point.

### Audio Setup Page

a. Press SETUP button on remote control during playing DVD, Press “◀/▶” until it will show following menu: (When the DVD menu displayed, the DVD system will auto pause. Press SETUP again, it will go on)'

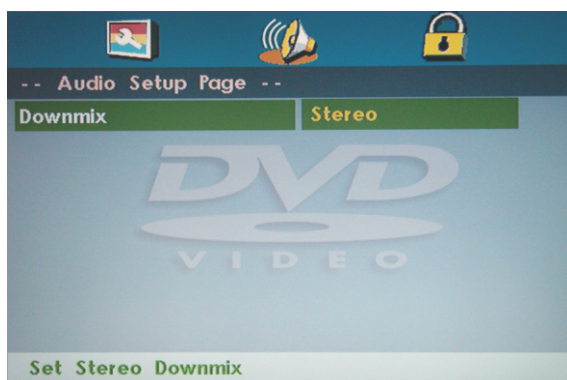

b. Press “▼/▲” to choose the items, then enter the desired item with ENTER button. It has been set already when the desired item becomes red.

*Note: Press Left button to get back the previous menu.*

c. Press SETUP to exit the menu.

d. The items of the menu as below:

Downmix: choose the downmix mode. There is only one item--stereo.

### Preference Page

a. Press SETUP button on remote control during there no disc in the DVD player, Press “◀/▶” until Preference will show following menu: (When the DVD menu displayed, the DVD system will auto pause. Press SETUP again, it will go on)'



b. Press “▼/▲” to choose the items, then enter the desired item with ENTER button. It has been set already when the desired item becomes red.

*Note: Press Left button to get back the previous menu.*

c. Press SETUP to exit the menu.

d. The items of the menu as below:

**Audio:** Choose the default language you would prefer to for DVD titles.

**Subtitle:** Set the language of subtitle menu or turn off the Subtitle.

*Note: not all DVD discs are recorded or offer subtitles in multiple language.*

**Disc Menu:** set the default language of Disc menu.

**Parental:** movies rated higher than the level set will not be played by selecting a certain access level. The parental lock can only be changed after input the correct password.

*Note: This function is available only when the discs have rating encoded on.*

It will ask a password when you select a level except for Adult. The factory setting of the password is 136900. Press Down button to the 'OK' after finishing input of the password, then press ENTER button to confirm and go back to the previous menu.

**Password:** Reset the password. The password should be 4-digit, and the initial password is 136900 (It is also the supercode).

*Note: Press Down button to the 'OK' after finishing input of the password, then press ENTER button to confirm and go back to the previous menu. If you forget the old password, you can always use the factory setting password '136900'.*

**Default:** Default the factory' settings EXCEPT the password.

## Disc Care

### About Disc Terms Title

Generally, pictures or music compressed on a DVD are divided into several sections, "title".

### Chapter

The smaller section unit of picture or music in a DVD under the title, usually one title is comprised of one or more chapters and each of them is numbered for easy searching, but some discs may not have a recording chapter.

### Track

A segment of picture or music on a CD, Each track is numbered for searching.

### Care of Disc

Video disc contains high-density compressed data that needs proper handling.

1. Hold the disc with fingers by outer edge and/or the center spindle hole. Do not touch the discs surface.
2. Do not bend or press the disc.



3. Do not expose the disc to direct sunlight or heating sources, Store discs in cabinet vertically, and in dry condition.

Prevent exposure to:

Direct sunlight

Heat or exhaust from a heating device

Extreme humidity

Clean the disc surface with a soft, dry cleaning cloth, Wipe the disc surface gently and radially from center toward the outer edge.

Do not apply thinner, alcohol, chemical solvent, or sprays when cleaning. Such cleaning fluids will permanently damage the disc surface.



## Simple Troubleshooting

If the display fails or the performance dramatically, check the Display in accordance with the following instructions. Remember to check the peripherals to pinpoint the source of the failure. If the Display still fails to perform as expected, contact the dealer for assistance.

SYMPTOM	POSSIBLE CAUSE	REMEDY
---------	----------------	--------

### GENERAL

Dead. No LED Lit	No power to the TV.	Check all connections to the TV including the DC jack, Mains lead and Mains socket.
Dead Led lit red	Set still in standby.	Press either the Power button or the Standby button on the Remote control.
Blue screen.	No signal.	
	Incorrect source selected.	Press INPUT button to select correct source.
Noisy, snowy, ghosting picture (TV)	Poor aerial signal.	If using an indoor aerial, try moving the aerial. Check aerial connections.
No sound	Sound "Mute".	Turn sound "Mute" OFF.
	Volume set too low.	Check volume settings.
	External leads not connected "if used".	Check all external leads are connected.

### DVD

Will not accept disc	DVD not selected	Select DVD with INPUT button.
Screen shows "NO DISC"	Disc placed incorrectly	Disc must have label side facing away if single sided.
	Disc damaged or dirty	Inspect disc. If damaged you must discard. If dirty see "Disc care" page 23.
Picture "Freezes" or breaks up	Disc damaged or dirty.	See "Disc care" page 23.
Certain disc functions not	Disc may not support required feature.	Read disc information.



## **Technical Specifications**

TV	
TV System	ATSC/NTSC
Screen size	15"(diagonal)
Resolution	1280x800pixels (RGB)
Aerialinput	75 $\Omega$ (unbalanced)
Audio output power	2x3 W
Power Consumption	45W
Remote control	
Type	infrared
Control distance	5m
Control angle	30° (horizontal)
Batteries	2 x 1.5 V, size AAA
Weight	70 g (without battery)